

Narva Date Codes – Fluorescent

The code consists of a letter to denote the year of production. Vertical bars are used to indicate the quarter. The year letter may be repeated up to three times, to indicate the month within the quarter.

Year Code

A	1980	2004
B	1981	2005
C	1982	2006
D	1983	2007
E	1984	2008
F	1985	2009
G	1986	2010
H	1987	2011
J	1988	2012
K	1989	2013
L	1990	2014
M	1991	2015
N	1992	2016
O	1993	2017
P	1994	2018
Q	1995	2019
R	1996	2020
S	1997	2021
T	1998	2022
U	1999	2023
V	2000	2024
X	2001	2025
Y	2002	2026
Z	2003	2027

Quarter Code

III	Quarter 1
II	Quarter 2
I	Quarter 3
	Quarter 4

Month Code

The month within a given quarter is denoted by duplication of the year letter according to the following table (in which the letter J is used to represent the year letter):

JAN	FEB	MAR	APR	MAY	JUN	JUL	AUG	SEP	OCT	NOV	DEC
III JJJ	III JJ	III J	II JJJ	II JJ	II J	I JJJ	I JJ	I J	JJJ	JJ	J

Examples:

III PPP	January 1994 or 2018
I TT	August 1998 or 2022
N	December 1992 or 2016