

### Ballast & ignitor date code identification

### **Magnetic ballasts**

5 number format: YDDDS 8 number format: YDDD 4 number format: YDDD

Y = Year of manufacture Y = Year of manufacture DDD = Day of manufacture

= Production shift TTTT = Time



#### **Ignitors**

Format: MMYY

MM = Month of manufacture (Roman numerals)
YY = Year of manufacture (e.g. 01, 02, 03...)



### Electronic ballasts for T5, T8, TC-L lamps

Format: aaaaLCPiWWYxxxxx

 
WW = Week of manufacture
Y = Year of manufacture
(Other numbers and letters identify
the product, version and serial number)



# **Electronic ballasts for compact lamps**

Format: WWY

WW = Week of manufacture
Y = Year of manufacture



# **Electronic ballasts for HID lamps**

Format: WW/YY

WW = Week of manufacture
YY = Year of manufacture



**Helvar Oy Ab** 

Yrittäjäntie 23, P.O. Box 100 FI-03601 Karkkila, Finland Tel. +358 9 56 541 Fax +358 9 5654 9600 www.helvar.com VAT No. FI17611369 ID No. 1761136-9 Domicile: Helsinki